


Laser Pointer

PLEASE NOTE THAT LASER RADIATION IS HARMFUL TO THE EYE. DO NOT LOOK DIRECTLY INTO THE APERTURE WHILE THE LASER IS IN OPERATION.

USER INSTRUCTIONS

Thank you for your purchase of laser pointer. Please follow the instructions below to use your powerful instrument.

1. Your Laser pointer uses two AAA 1.5 Volt batteries. We recommend alkaline batteries for longest life.
2. To change the batteries, simply unscrew the cap from the top of the instrument. Install the batteries with the positive (+) pole up. After inserting the batteries, replace the cap.

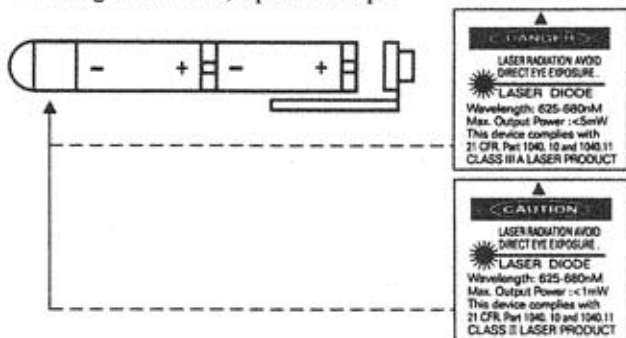

3. To operate the pointer, simply press on the button on the side of the instrument. Releasing the button will turn the pointer off.
4. The laser pointer is a laser device and can be harmful if used improperly.
PLEASE KEEP OUT OF THE REACH OF CHILDREN.

CAUTION: USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES NOT SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.